




# IMPORTANT

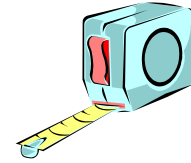


Templates must be printed without size modifications and verified for dimensional accuracy.




- Before printing, select the printing options necessary to ensure that copies are produced without size adjustments.
- After printing, measure the dimensions indicated on the template to ensure correct scale.

# NO.44 DOUBLE DOOR HOLDER INSTALLATION TEMPLATE


**NOTE**  
DO NOT REMOVE NAIL  
UNTIL INSTALLATION IS  
COMPLETED

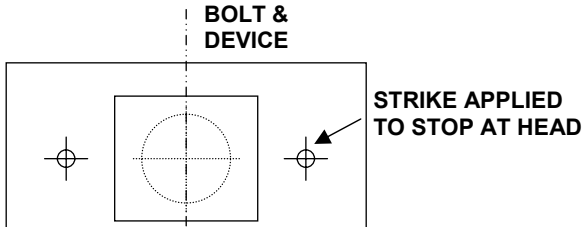

FOLD 90° ON DOTTED LINE - FOLD FIRMLY AGAINST STOP AT HEAD & INACTIVE DOOR. MARK HOLES WITH PUNCH

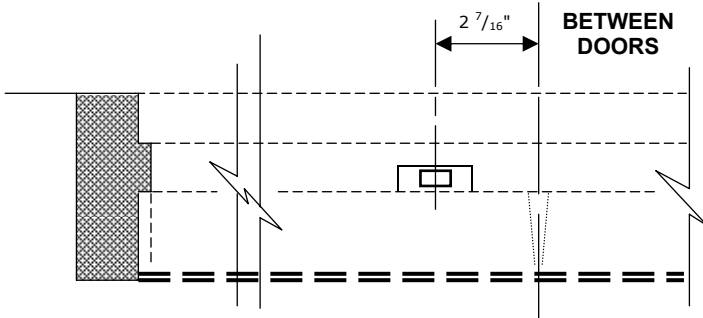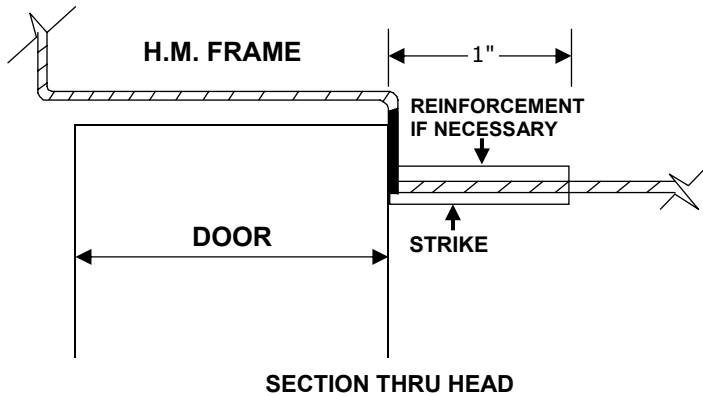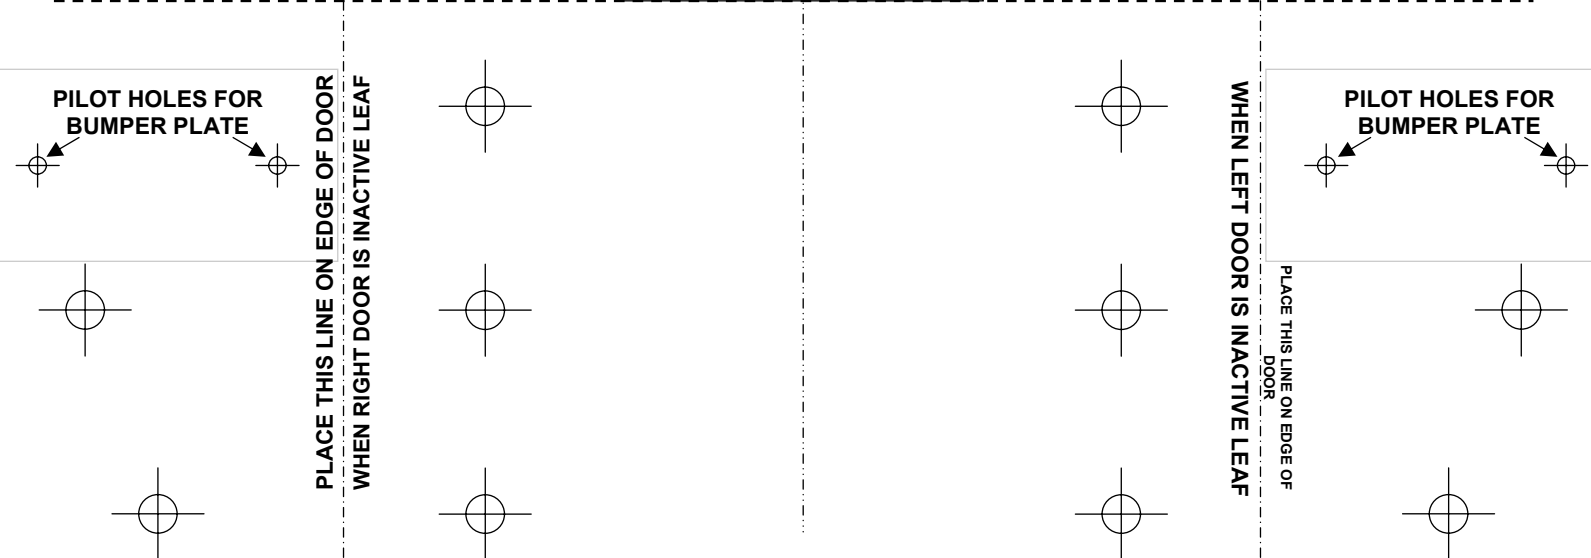

PLAN AT HEAD  
SHOWN FOR RIGHT HAND INACTIVE  
OPPOSITE FOR LEFT HAND INACTIVE

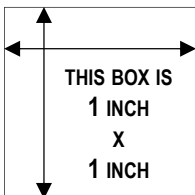

P3206 04/10

© ALARM LOCK 2010



345 Bayview Avenue, Amityville, New York 11701  
For Sales and Repairs 1-800-ALA-LOCK  
For Technical Service 1-800-645-9440  
(Note: Technical Service is for locksmiths and alarm professionals only)  
Publicly traded on NASDAQ Symbol: NSSC

## INSTALLATION INSTRUCTIONS

1. Use template above and mark 8 mounting holes for 44 holder, 2 for strike plate, 1 for bolt center and 2 for bumper plate.
  2. Drill 8 pilot holes for 44 holder and mount to inactive leaf with 8 #10 self-tapping screws.
  3. Drill 9/16" – 5/8" hole for bolt at head.
  4. Drill 2 pilot holes for strike plate and mount with 2 #6 self-tapping screws.
- Note:** Light gauge hollow metal frames may require reinforcement.
5. Drill 2 pilot holes for bumper plate and mount to active leaf with 2 #6 self-tapping screws.
  6. Install lever and cover with 6 6-32x3/8 flat head machine screws.
  7. Remove nail from bolt and test for proper operation.