

# GEM-RP8LCD KEYPAD ADDENDUM

**SUBJECT:** Resetting an active PGM output with system disarmed.

An active PGM output of a disarmed system will be reset when you:

- Enter your Code and press **AWAY**
- Enter your Code and press **STAY**

If Easy Arm is enabled, then holding down **STAY** or **AWAY** will reset an active PGM.

Therefore, if using the PGM Output to activate a latched alarm output (such as a strobe or auxiliary sounding device) it is recommended that Easy Arm **NOT** be enabled.