



333 Bayview Avenue
Amityville, New York 11701
For Sales and Repairs, (800) 645-9445
For Technical Service, (800) 645-9440 or visit us at
<http://tech.napcosecurity.com/>
(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC
© NAPCO 2013

NAPCO iSeeVideo ISV-REPT01 Installation Guide


WI2081 12/13

The **ISV-REPT01 Wireless Repeater** module extends the transmission distance between the **ISV WAP Wireless Access Point** and wireless iSeeVideo cameras by regenerating digital data signals in your wireless network.


Installation

Install the **ISV-REPT01** on a wall outlet located half way between the **ISV WAP** and the iSeeVideo wireless camera. The **ISV-REPT01** will search for and automatically connect to the **ISV WAP** if within range. Power cycle the iSeeVideo camera to start the connection process. The **REPEATER TO CAMERA LED** will turn on after the camera is successfully connected to the **ISV-REPT01**. **Note:** If adding the **ISV-REPT01** to an existing installation, the camera must be using the Napco default SSID. If the camera is locked down with a custom SSID, you must factory reset the camera (insert a paper clip into camera **Reset** socket, and hold for 12 seconds). Optionally, after the camera is back on line, you can generate a new custom SSID (lock) if desired.


Controls and Indicators: Front Panel

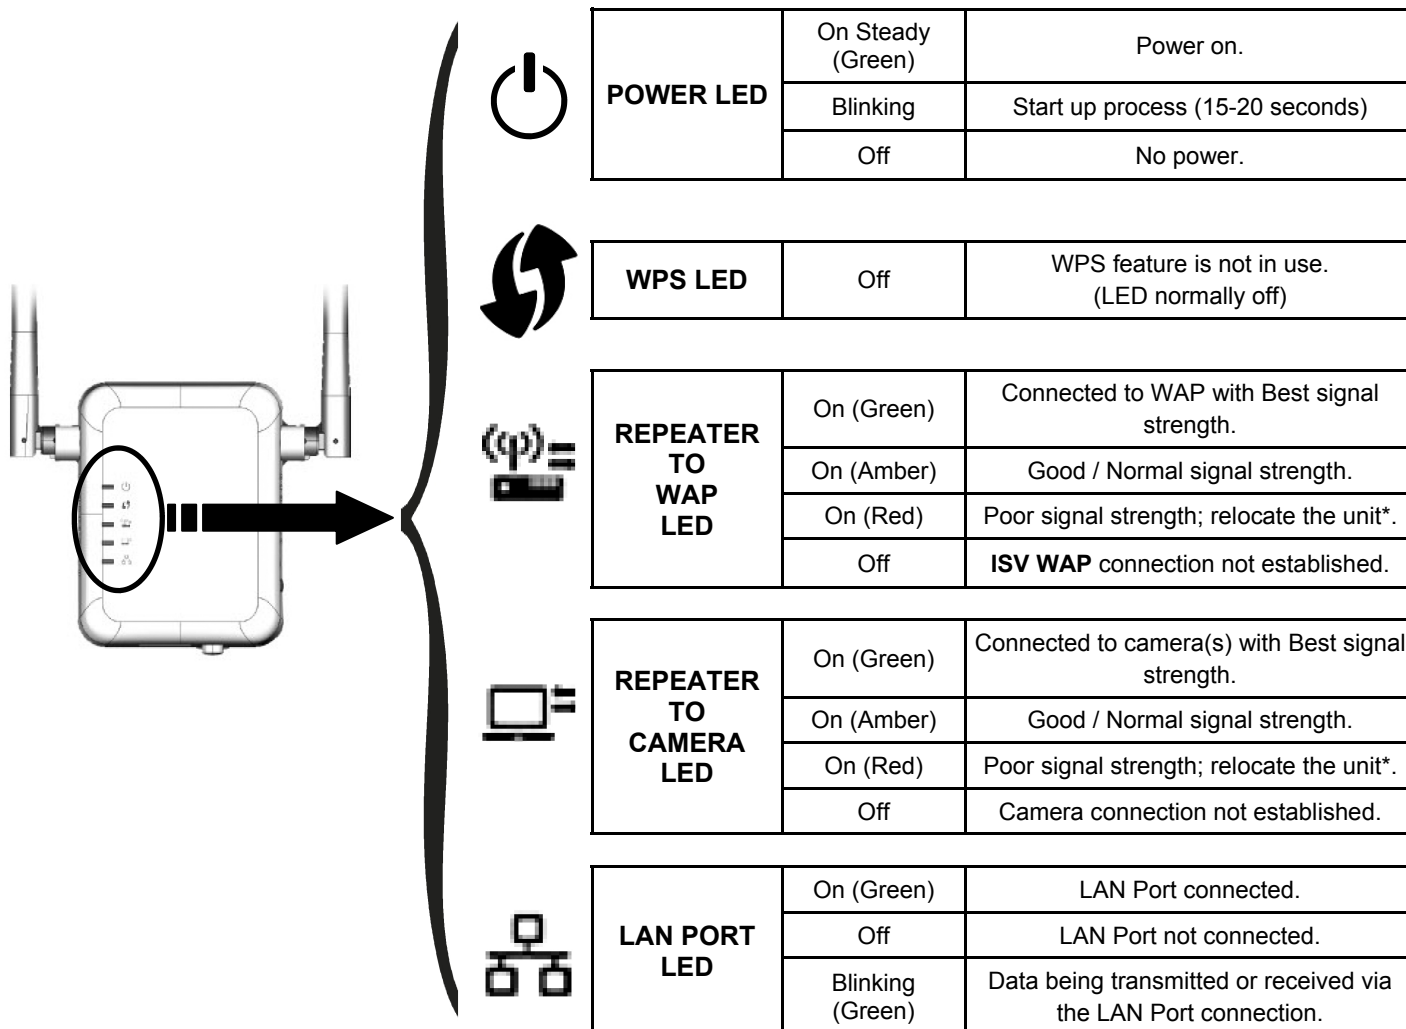

Controls and Indicators: Rear Panel

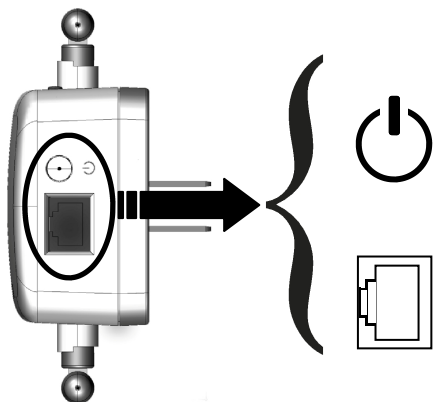

POWER ON / OFF SWITCH	Press button to turn on / off your ISV-REPT01 Wireless Repeater module.
LAN PORT	(Optional) Use a standard LAN cable to connect your ISV-REPT01 Wireless Repeater module to a camera or PC.

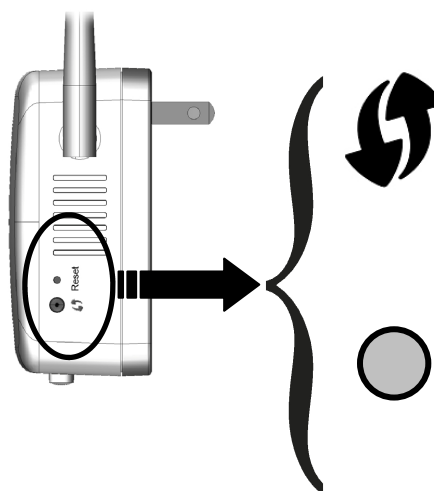

WPS BUTTON	(Not used)
RESET BUTTON	<p>To depress this recessed button, a pin or paper clip is required. It can be activated any time the ISV-REPT01 module is in the "ready" mode (when both the ISV WAP and wireless camera connections are established, each with normal signal strength; see the LED indications on the previous page).</p> <ul style="list-style-type: none"> When this recessed button is pressed and held down for 12 seconds, the ISV-REPT01 is reset to the manufacturer default settings and restarts.

When Relocating the Unit

Place the **ISV-REPT01** module as close as possible to an *equal* distance between the **ISV WAP Wireless Access Point** and wireless iSeeVideo cameras, as shown:

